

User Guide

 Hisense Ltd.
23 Moshe Becker St.
Rishon Le Zion 7535929
ISRAEL

Baby sound monitor

Model : SC - 210



IMPORTANT SAFETY INFORMATION

- It is very important that you read the User Guide carefully as it contains detailed information you will need to get the most from your SC210 Sound Baby Monitor.
- Your Sound Baby Monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision of a child.
- The Baby Monitor has been designed to provide some added reassurance in the form of sound transmission for those times when you are not in the same room as your baby provided you always stay within hearing range of the baby monitor during use. Your Baby Monitor is not a medical device, nor a device to prevent cases of Sudden Infant Death Syndrome (SIDS) or "cot death", and you should not rely on it for your baby's wellbeing. It is important that you regularly check on your baby personally.
- Make sure the Baby unit, Parent unit and mains adaptor cables are kept out of reach of your baby and other young children at all times, at least one meter away.
- Never place the Baby unit or Parent unit inside your baby's cot, bed or playpen.
- Never cover the Parent or Baby units with clothes, towels or blankets or any other item. Never use or place your Parent or Baby unit in or near moisture or water. Immersing in water could cause electric shock and even death.
- The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least one meter from other electronic equipment, such as microwave ovens or hi-fi devices, otherwise they could cause interference. During continual use, the Baby unit power adaptors may become warm to the touch. This is normal and should not be a concern.

WARNING:

- Risk of suffocation!
Keep all packaging materials and protective foils out of reach of children.
- Do not place the AC Adaptor cable in a high "wear and tear" location. Never use a frayed or compromised cord.

Battery safety

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let the battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, and seek medical assistance. Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged. Use only the battery supplied with the product. Improper use, or use of unapproved batteries may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery is damaged, remove product from the charger and stop using the product. Never use a damaged battery.

Disposal

Always dispose of your products at the end of their life in accordance with your local waste disposal requirements. All cardboard and paper packaging materials should be recycled in accordance with your local council waste regulations.

GETTING STARTED

Interference Free Frequency

Your SC210 Sound Baby Monitor offers the best DECT Technology, operating on the 1.8Ghz frequency which eliminates potential interference from other common wireless devices such as cordless telephones, wireless networks (Wi-Fi), Bluetooth and cordless computer devices.

Pack Contents

- Parent unit (receiver)
- Baby unit (sender)
- Mains adaptor with charger pod
- 2 x NiMH Rechargeable Batteries (1.2V, 750mAh)
- Mains adaptor with power cord

Installation

For the Parent Unit

1. Remove the Belt Clip by lifting the clip at the top and sliding it downwards.
2. Then remove the battery cover on the back of the Parent Unit by pressing and sliding it downwards.(Illustration 1)

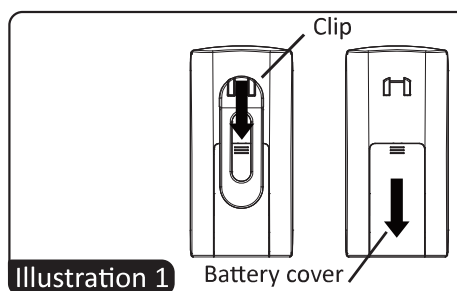 


Illustration 1

Note:

Observe the correct polarity and direction of the batteries when inserting. The unit will not operate if the batteries are inserted incorrectly.

3. Insert the rechargeable batteries (supplied) as illustrated and close the battery cover again.
4. Place the Parent Unit into the Charger Pod.
5. Plug the mains adaptor into a mains power socket.

WARNING: DO NOT USE STANDARD/ALKALINE BATTERIES IN THE PARENT UNIT, AS THERE IS A RISK OF EXPLOSION AND/OR INJURY. USE ONLY Ni-MH RECHARGEABLE BATTERIES AS SUPPLIED.

6. Press [⏻] to turn the Parent Unit on.

- Before first use, or if it has been out of use for a long time, the Parent Unit will need to be charged for 16 hours before use. After this time, the Parent Unit will operate from the Charger pod when switched on. Note that the Parent Unit cannot be used without batteries, even if it is placed in the charger pod.

For the Baby Unit

1. In event of a power failure, your Baby Monitor can switch to battery power.

It is therefore recommended that you insert non-rechargeable batteries in the Baby Unit.

2. Remove the battery cover on the back of the Baby Unit by pressing and sliding it down.

Insert 4 alkaline batteries of the type AAA (not provided) as marked on the unit and close the cover again.

Do not use rechargeable batteries in the Baby Unit. (Illustration 2)

3. Plug the power cord into the power input at the side of the Baby Unit and plug the adaptor plug into a mains power socket.

WARNING: Only use the AC power adaptor supplied with the product as other power adaptors could damage the product. This product is designed for indoor use only.

 
4. Press and hold [⏻] key to turn on the baby unit.

- The Baby Unit should be placed about 1 meter to 1.5 meters away from the baby's cot on a flat surface. Never place the Baby Unit inside the cot, bed or playpen. Make sure the unit, cords and mains adaptor are out of reach of the baby and other young children. Never place either Unit on antique or polished surfaces (as slippage or scuffing may occur). The unit may cause harm if it falls onto baby or other young children.

Note: If you place the Parent and Baby units too close together you will hear a high pitched noise called "feedback", this is normal. The units are designed to be located in separate rooms.

To prevent feedback, do not take the Parent unit into the nursery/baby's room.

Do not Press Talk button when the Baby unit and Parent unit are positioned in the same room. Feedback will be generated if the talk button is pressed when the Baby unit and Parent unit are within 3 meters of each other.

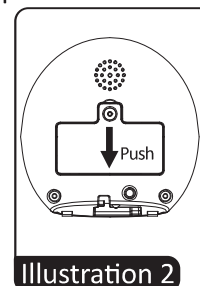

YOUR BABY SOUND MONITOR

Baby unit (Sender)

1. Power On/Off Key

Press to turn ON the Baby unit.

Press and hold to turn OFF.

2. Nightlight

3. Microphone

Picks up the sounds from your baby's room.

4. Page key

 
Press and hold for 2 seconds to Page the Parent Unit with an audible alert.

Useful to call for assistance or to locate a missing Parent Unit.

5. Speakerphone

6. Battery Cover

For non rechargeable batteries (not supplied).

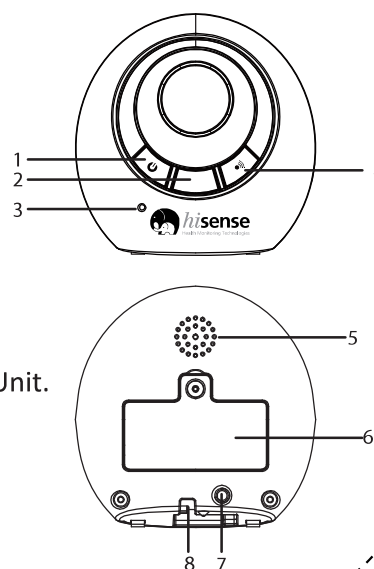

7. Thermometer

Monitors temperature in baby's room.

8. DC 7V input

Connecting to Power Adaptor.

Parent unit (Receiver)**9. Belt Clip****10. Battery Cover**

Rechargeable battery pack.

11. Power Light**12. Noise level indicators****13. Display**

Indicates the current settings of your Baby Monitor, including: Battery level, Date and Time, Temperature, Lullaby on/off, Lullaby melody.

14. Talk key

Press and hold to talk to your baby or partner in the baby's room via the Baby Unit.

15. Menu key

Press to enter the menu options.

16. Volume Up/Down Keys

Adjust the volume at which you hear the sounds in your Baby's room, and scroll through the menu during setting.

17. Link Light

Green light ON indicates "Linked" to Baby Unit.

Flashing light indicates "Link" is lost.

 
 
 
18. Power On/Off Key

Press to turn the parent unit ON.

Press and hold to turn OFF.

19. OK key

Press to select options in the menu.

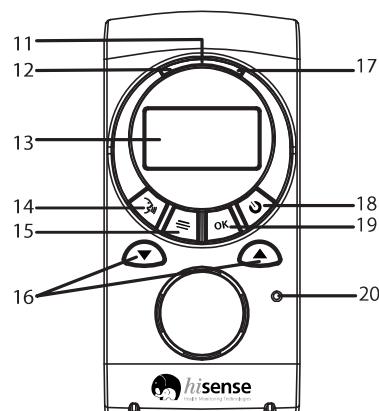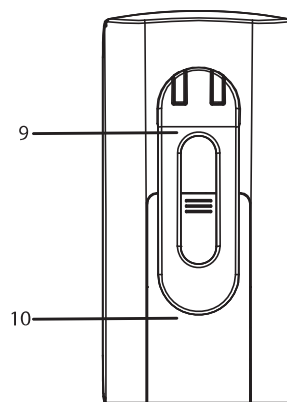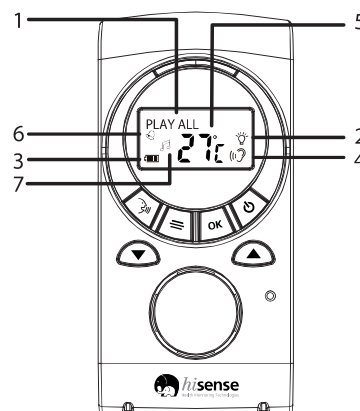20. Microphone**LCD DISPLAY OF BABY MONITOR****Parent Unit****1. Numbers/Characters indicator****2. Night light indicator****3. Battery level indicator****4. Sensitivity indicator****5. Temperature indicator****6. Feed time Alarm indicator****7. Lullaby on/off indicator**

OPERATION

Once you have set up your baby monitor, you will be able to hear the sounds in your baby's room through the parent unit. You will also be able to see those sounds as the green sound sensor flashes.

Note: If the connection between the parent unit and baby unit is broken at any time the green "Link" light on the parent unit will flash and the green sensor light will cease to react to any sounds. To re-establish the "Link", follow the directions in the "Troubleshooting" chapter.

Powering on/off the baby monitor

After having connected the baby monitor you will have to switch on both units. Press the On/Off key on each unit. To switch off the unit press and hold down the On/Off key.

Volume

You can adjust the volume at which you hear your baby by using the keys ▲ and ▼ on the parent unit. This will not effect the sensitivity of your baby monitor, only the volume at which you hear those sounds through the parent unit.

Battery charge indicator and battery low warning

The parent unit will work up to 10 hours out of the charger pod, but this depends on the level of charge in the batteries. The charge level is indicated by the battery icon on the Display. If the charge becomes low, a "battery low warning beep" will sound and the battery icon on the parent unit's Display will begin to flash. If this occurs you should return the parent unit to the charger pod to re-charge the batteries. You can still use your parent unit from the charger pod. On the display you can see the charging status:

Battery icon filled = full capacity

Battery icon 2/3 filled = approx. half capacity

Battery icon 1/3 filled = batteries nearly exhausted

Battery icon not filled / frame flashes = batteries must be charged

Sound alert

You can set your parent unit to give an extra warning "beep" should the noise levels in your baby's room activate the light on the sound sensor. This is particularly useful if the volume of your parent unit is turned down and you are just using the sensor light to monitor the noise levels in your baby's room.

Parent to Parent paging

Useful if one parent is in the baby's room and needs to contact the other. Also helps to find a mislaid parent unit.

At the baby unit

Press and hold the **Page Key** for 2 seconds. The parent unit will emit a tone. The tone can be switched off by pressing any key on the parent unit or by pressing the page key on the baby unit once again

Night light

The baby unit has a night light which emits a soft glow, providing comfort and re-assurance for your baby and allowing you to see them in a darkened room. You may also turn the night light on and off from the parent unit.

SETTINGS

You can change several settings using the menu.

Press the **Menu** key to open the menu.

Use the **▲** and **▼** key to scroll through the menu.

Press **OK** to open a submenu or to confirm a setting.

Press the **Menu key** several times if necessary, to leave the menu.

Date and time

Press the **Menu key**.

Select **Clock** and press **OK**.

Select **Hour Format** and press **OK**.

- If 24 hours is set **12Hrs?** appears. Press **OK** to activate 12 hour format.

- If 12 hours is set **24Hrs?** appears. Press **OK** to activate 24 hour format.

Select **Set Time** and press **OK**.

Use **▲** and **▼** to adjust the year and press **OK**.

Use **▲** and **▼** to adjust the month and press **OK**.

Use **▲** and **▼** to adjust the day and press **OK**.

Use **▲** and **▼** to adjust the hour and press **OK**.

Use **▲** and **▼** to adjust the minute and press **OK**.

Select another menu item or leave the menu by pressing the **Menu key**.

Language

Press the **Menu key**.

Select **Language** and press **OK**.

Select a language and press **OK**.

Select another menu item or leave the menu by pressing the **Menu key**.

Feed timer

If your baby is in a routine of regular feeding intervals, you may wish to set your Baby Monitor to alert you when your baby's feeds are due. You have the choice to either set an alert just for your baby's next feed time, or for your baby's next feed time plus subsequent feeds based on the interval time between them.

Note: Make sure you have set the correct date and time. If you only want to get a single alarm set the interval to 00:00.

Press the **Menu key**.

Select **Feed Time** and press **OK**.

Select **Set Time** and press **OK**.

Use **▲** and **▼** to adjust the hour and press **OK**.

Use **▲** and **▼** to adjust the minute and press **OK**.

Select **Alarm** and press **OK**.

- If the function is switched on (bell icon on the display) **Off?** is shown.

To switch the function off press **OK**.

- If the function is switched off **On?** is shown.

To switch the function on press **OK**.

or

Use ▲ and ▼ to select Volume and press **OK**.

Use ▲ and ▼ to adjust the alarm volume and press **OK** and the Menu key.

Select Set Interval and press **OK**.

Use ▲ and ▼ to adjust the hour and press **OK**.

Use ▲ and ▼ to adjust the minute and press **OK**.

Select another menu item or leave the menu by pressing the **Menu key**.

Temperature

Note: It is very important for your baby's health to ensure that they are kept at a safe temperature. This includes the room temperature, baby's temperature, baby clothing and bedding (contact your local health authority to ensure you are aware of the current recommendations and guidelines). Your Baby Monitor can show the current room temperature on the Baby Unit and the Parent Unit, and can even be set to alert you if the temperature falls outside of a defined range.

Press the **Menu key**.

Select **Temperature** and press **OK**. Select **Set Range** and press **OK**.

Use ▲ and ▼ to adjust the upper limit (Up Limit) and press **OK**.

Use ▲ and ▼ to adjust the lower limit (Low Limit) and press **OK**.

Select **Temp. Alert** and press **OK**.

- If the function is switched on (bell icon on the display) **Off?** is shown.

To switch the function off press **OK**.

- If the function is switched off **On?** is shown.

To switch the function on press **OK**.

or

Use ▲ and ▼ to select Volume and press **OK**.

Use ▲ and ▼ to adjust the alarm volume and press **OK** and the **Menu key**.

Press ▲ or ▼ to change the temperature unit (degrees Celsius or Fahrenheit).

- If "Celsius" is set, **Degree F?** is shown. To set to "Fahrenheit" press **OK**.

- If "Fahrenheit" is set, **Degree C?** is shown. To set to "Celsius" press **OK**.

Select another menu item or leave the menu by pressing the **Menu key**.

Note: Please note the baby monitor cannot manipulate the temperature in your baby's room, it only provides a temperature reading.

Sound alert

Note: You can set your parent unit to give an extra warning "beep" should the noise levels in your baby's room activate the sound level indicator on the sound sensor. This is particularly useful if the volume of your parent unit is turned down and you are just using the sensor light to monitor the noise levels in your baby's room.

Press the **Menu key**.

Select **Sound Alert** and press **OK**.

- If the function is switched on (bell icon on the display) **Off?** is shown.

To switch the function off press **OK**.

- If the function is switched off **On?** is shown.

To switch the function on press **OK**.

or

Use **▲** and **▼** to select Volume and press **OK**.

Use **▲** and **▼** to adjust the alarm volume and press **OK** and the **Menu key**.

Select another menu item or leave the menu by pressing the **Menu key**.

Sensitivity

Press the **Menu key**.

Select Sensitivity and press **OK**.

Use **▲** and **▼** to select the desired level and press **OK**.

Select another menu item or leave the menu by pressing the **Menu key**.

Lullaby

Press the **Menu key**.

Select **Lullaby** and press **OK**.

Select **Select new** and press **OK**.

Use **▲** and **▼** to select a lullaby and press **OK**.

Select **Play?** and press **OK**.

- The selected lullaby is played in the baby's room (for approx. 15 minutes).

On the display appears a musical note icon.

- To stop playing select **Stop?** and press **OK**. Select **Volume** and press **OK**.

Use **▲** and **▼** to adjust the volume and press **OK**.

Select another menu item or leave the menu by pressing the **Menu key**.

Night light

Press the **Menu key**.

Select **Night Light** and press **OK**.

- If the function is switched on (lightbulb icon on the display) **Off?** is shown.

To switch the **night light** off press **OK**.

- If the function is switched off **On?** is shown.

To switch the **night light** on press **OK**.

Select another menu item or leave the menu by pressing the **Menu key**.

Feature	Specifications
Operating Frequency	DECT 1.8 GHz
Range	Up to 300m under optimum conditions. The range is reduced in buildings (up to 50m) as a result of walls, doors , etc.
Power supply (Baby Unit)	Input: 100-240 VAC 50/60Hz Output: 7 VDC, 420 mA,
Non rechargeable batteries, baby unit (not included in the package contents)	Type: AAA, 1.5 V Alkaline
Transmitting power	Average: 10 mW Maximum: 250 mW
Power supply (Parent Unit) Re-chargeable batteries (Parent Unit) (included in the package contents)	Input: 100-240 VAC 50/60Hz Output: 7 VDC, 420 mA Type: 2 X 1.2V AAA 750mAh Ni-MH batteries
Operating time with charged battery	Approx. up to 10 hours

TROUBLESHOOTING

Problem	Possible cause(s)
The red power lights do not turn on when you plug in the power.	1. Check if the units are properly connected to the power supply. 2. Check if the power is turned on. If not, Press [⏻] to turn on the power.
The green Link light on the Parent Unit is flashing and cannot hear the sounds from your baby's room.	1. You may have moved out of range. Move closer to the Baby Unit and wait 5 seconds for the Link to establish. 2. You may need to re-establish the Link between the two units. Turn both units off by pressing and holding the [⏻] and then turn on again by pressing the [⏻].
Can't hear your baby on the Parent Unit but the Link light is still glowing steadily.	Check if the volume is turned up on the Parent Unit.
The battery icon on the Display is flashing on the Parent Unit.	Your re-chargeable battery is running low. Return the Parent Unit to the Charger Pod to recharge it.
Two horizontal bars flash centre of the display on the parent unit and "Not Linked" is shown.	1. The battery in the parent unit is not fully charged. Charge the parent unit for 16 hours before use. 2. The power to the baby unit may be turned off or disconnected, and or the Baby unit may be turned off. Reconnect the AC power adaptor to the baby unit and or turn on the baby unit. 3. You may have to re-establish the link between the two units. You will need to remove the battery from the parent unit and register the parent unit back to the baby unit by following the instructions below: <ul style="list-style-type: none"> • Disconnect the power cable from the baby unit, remove the batteries from the parent unit. • Press and hold the power button on the baby unit and connect power to baby unit whilst you are still holding the power button until the night light flashes rapidly then release the button. • Within 3 seconds push and hold the Page button until the night light flashes slowly, the baby unit is now in registration mode. • Within 30 seconds hold the power button on the parent unit while inserting the batteries keep holding the button until the LINK POWER and NOISE LED's flash. • Release the power button and wait for both parent and baby units to stop flashing (up to 30 seconds) the parent unit will be registered to the baby unit.
A high pitched ear piercing noise will be heard from the units (feedback).	Check if the Parent and Baby Units are too close together. Move them further apart.

PLEASE NOTE: In case that both units are turned OFF, DATE and TIME data will reset to the factory setting. In order to avoid that from happening, please keep the Baby Unit turned ON.

RECOMMENDATION: It is recommended to keep the Parent Unit in its charger pod when not in use.

CUSTOMER SUPPORT

If you have any problems setting up or using this product you will find useful tips and information in the Troubleshooting section of this user guide.

If you have further questions about using the product after reviewing the resources above or would like to purchase replacement parts or accessories, please contact your local distributor.

Important

Please retain your purchase receipt and attach to the back page of this user guide as you will need to produce this if warranty service is required.